


COMMENTS

1. REMOVE PROTECTIVE PAPER FROM DISCS.
2. CLEAN / DEGREASE / SAND PARTS.
3. FILE TWO GROOVES IN DISC NO.1. (SEE FIG. 1)
4. TRIM DISC NO. 2 PER FIG. 2. (IF REQUIRED)
5. CHECK FIT OF DISC AND SECTOR IN MODEL RIM.
ADJUST TO FIT AS REQUIRED.
6. RADIUS THE EDGE OF THE CENTER HOLE. (SEE FIG. 2)
7. PRIME AND PAINT DISCS NO. 1 AND SECTORS MATT BLACK.
8. PRIME AND PAINT SMALL DISC SILVER. (TAMIYA TS-76)
9. CUT FROM CLEAR AND APPLY THE BLACK CENTER DECALS.
10. GLUE CENTER DISC #2 TO BACK OF MAIN DISC #1.
11. APPLY BBS DECALS.

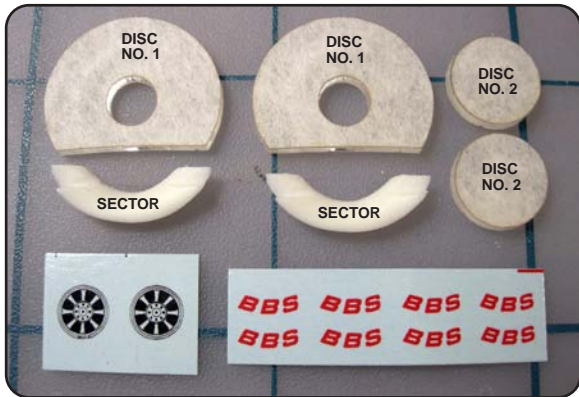

CLEARANCE FOR SECTOR

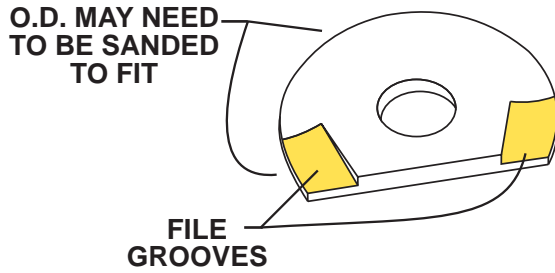


FIG. 1
BACK OF DISC #1

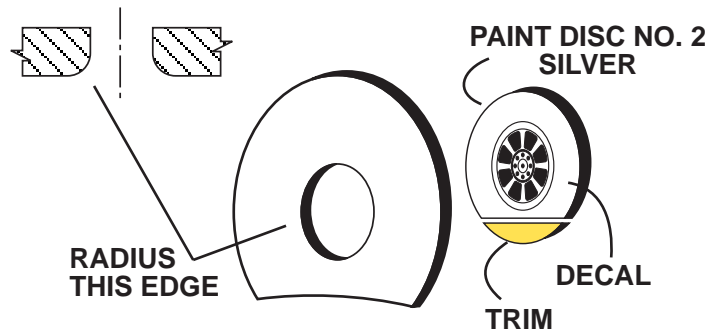


FIG. 2
FRONT OF DISC



FRONT WHEEL DISC
FOR HW 2007 FERRARI